


# TURNER HASTINGS

MADE IN ENGLAND

---

Large basin AND cloak basin  
TAB Bracket mounted Installation Instructions

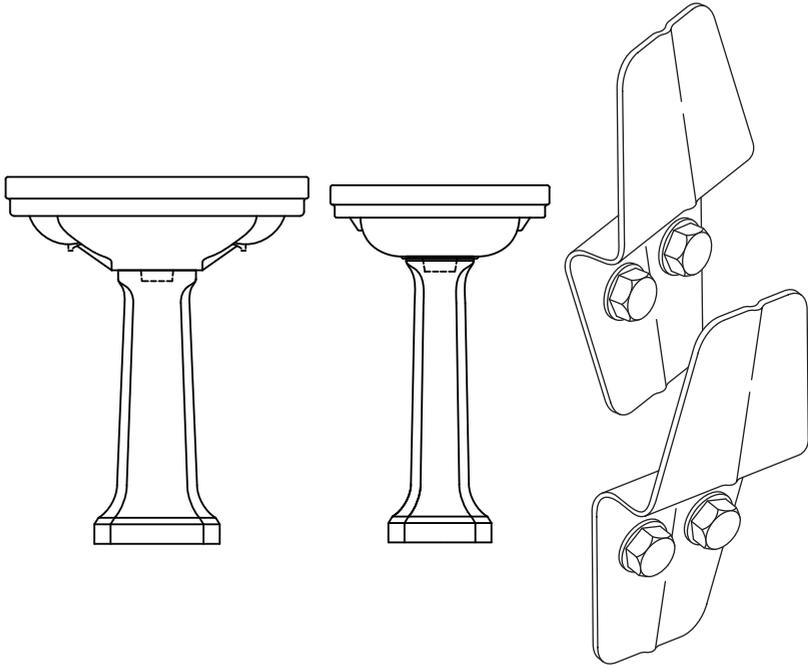

**Important Information:**

Please check the products for transport damage and that contents are complete before installation.

Consult a qualified plumber if you have any problems installing this product.

Complaints made following installation regarding the above cannot be accepted.

### Pedestal and Semi-Pedestal Guidelines

Thank you for purchasing this Turner Hasting product. These instructions relate to our basins and pedestals. Before you start check you have the necessary tools for installation.

 Before you begin: Always handle our products with care and attention.

Ceramic products are brittle, and may chip, crack or break if not handled carefully. Broken ceramic is extremely sharp. Take care not to over tighten screws and fittings. Over tightening may lead to breaks or chips in the ceramic.

These instructions are for installing the basin on a solid wall only. For other installations including wall bracing please contact us directly for further guidance.


Before installing the product, please inspect for damage incurred during transport. Imperial can not take responsibility for damaged products after or during their installation. We recommend that the guidance of a qualified plumber is sought throughout the installation process.

Always observe the plumbing and building regulations in the area the product is being installed in.

Turner Hasting reserves the right to amend the design of its products without notice, as specified in the company catalogue.

### Tools and Fittings:

The following tools are necessary for the installation of this product. Horus would once again recommend that a qualified plumber carry out the installation of this product.

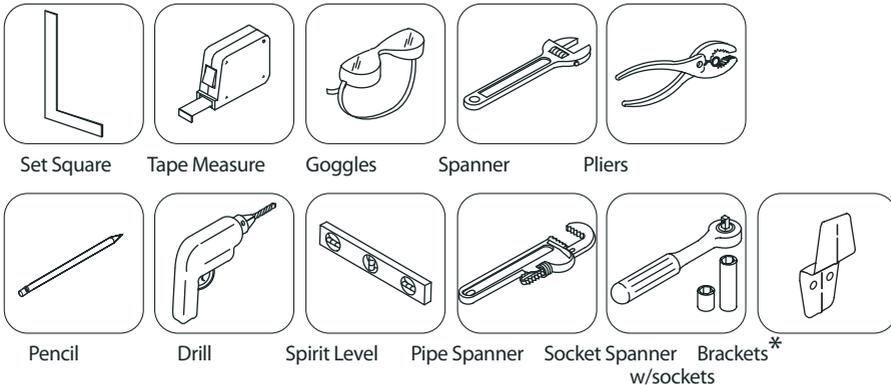

\*Whilst some of our basins use brackets kit to hold them in place, some are fixed by basin bolts. Please check the back of this installation to see which mounting is suitable for your product before continuing. If your basin requires a bolt fixing, please turn to the back page of this booklet.


## Pedestal and Semi-Pedestal Guidelines

### Preparing the Wall for Installation (Bracket attachment):

Position the pedestal into the approximate position.

Carefully lift the basin into place on the pedestal, and slowly move the pedestal as required to ensure the ideal fit. We recommend at least two people participate in lifting the basin due to the weight of the ceramic.

- ⚠ The basin must be supported by the pedestal.
- Assemble the brackets as shown below (fig 1).
- Then insert into cavity hole in the underside of the basin (fig 2)
- Hold the brackets in place under the basin and mark the bracket hole locations on the finished wall using a sharp pencil. (See below.)
- Carefully remove the basin from the pedestal and set aside.
- Move the pedestal from the area.

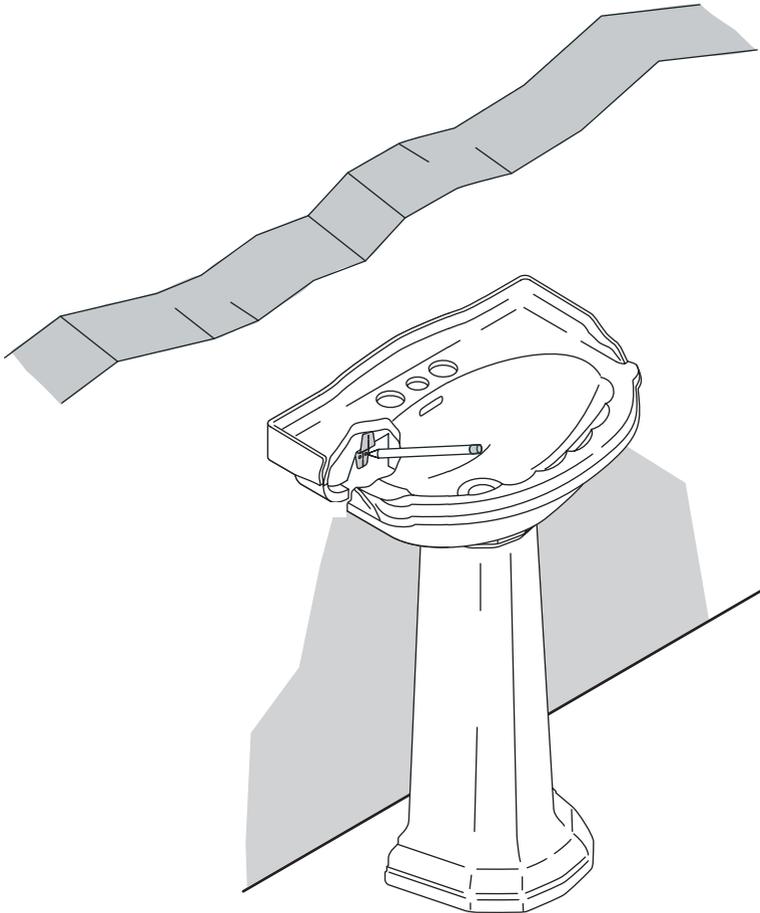

## Pedestal and Semi-Pedestal Guidelines

⚠ Important: To mount the bracket to the wall, use fixings appropriate for your wall type.

Mount the brackets to the wall at the marked locations.

Install the taps and waste to the basin.

We recommend a qualified plumber carry out this procedure.


Position the pedestal on the floor.

Connect and tighten the waste to the trap. Complete the water supply connections to the basin.

Consult a qualified plumber to assist with this.

Run water supply into the basin and check for leaks, faults or any other anomalies.

⚠ Optional: Apply silicone sealant around the pedestal foot to stabilize.

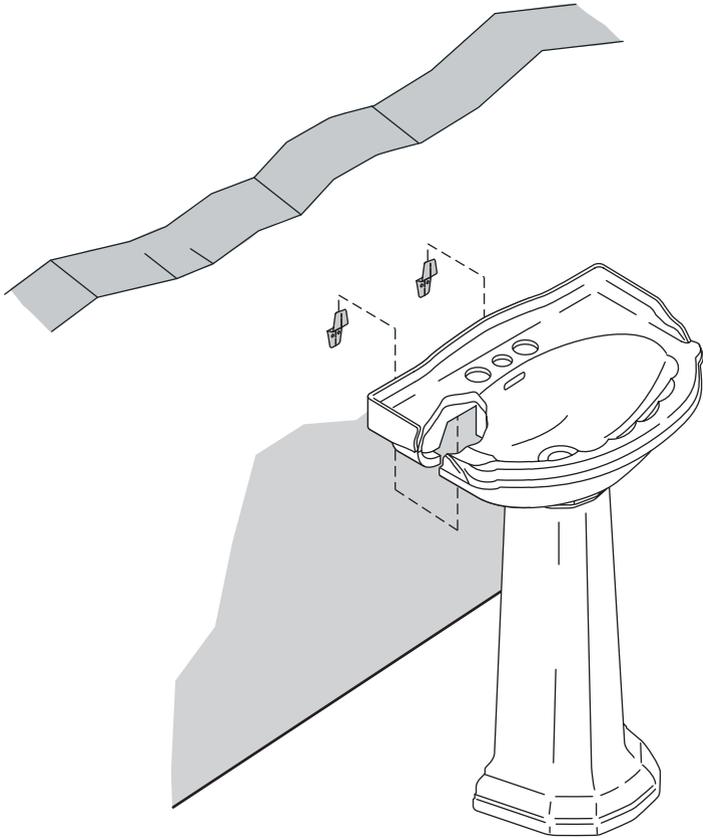

### Guarantees, Terms and Customer Care:

We recommend that all products are purchased with the assistance of a specialist bathroom retailer and always installed by an experienced installer who is a member of a recognised plumbing association.

TURNER HASTINGS sanitaryware products are produced to the most demanding standards set by any manufacturer in the industry and each piece can be subject to as many as 15 individual quality control checks during production.

Notwithstanding the high quality finishes achieved in the TURNER HASTINGS factory, all sanitaryware is subject to the limitations of the ceramic manufacturing process.

#### Vitreous China

These are extremely hard, non-porous products; but are also brittle and therefore must not be put under stress during installation.

Basin waste fittings when over tightened can create stress within the ceramic material which may in time cause the failure of the product. Waste fittings should be carefully bedded in silicon and the back nut hand tightened.

One additional quarter turn using a suitable spanner is sufficient to create the required watertight seal.

Care should also be taken when fitting brassware to tap platforms in order to prevent similar stress related failures. All products should be inspected before installation.

#### Looking after your Bathroom:

The glazed finish of your sanitaryware should be cleaned after use by applying a little cream-type cleaner.

Apply using a sponge or damp cloth and rinse thoroughly with clean water.

Cleaners containing abrasive materials should be avoided.

Gold plated brassware and taps should be cleaned with warm soapy water and dried with a soft cloth. Under no circumstances should bleach or abrasive cleaning products, polishes, or detergent be used on plated surfaces and in particular should these materials be used on gold plated items it is possible that the surface will be damaged.

Measurements & Drawings

