


INSTALLATION INSTRUCTIONS

TEIDE URINAL - BACK INLET | TE580UR

Thank you for purchasing the Turner Hastings Teide urinal. If you have any questions during the installation of his product, please do not hesitate to call us on 1300 00 2284.

1. Check all parts are included in the box:

Teide urinal + all parts pictured below.

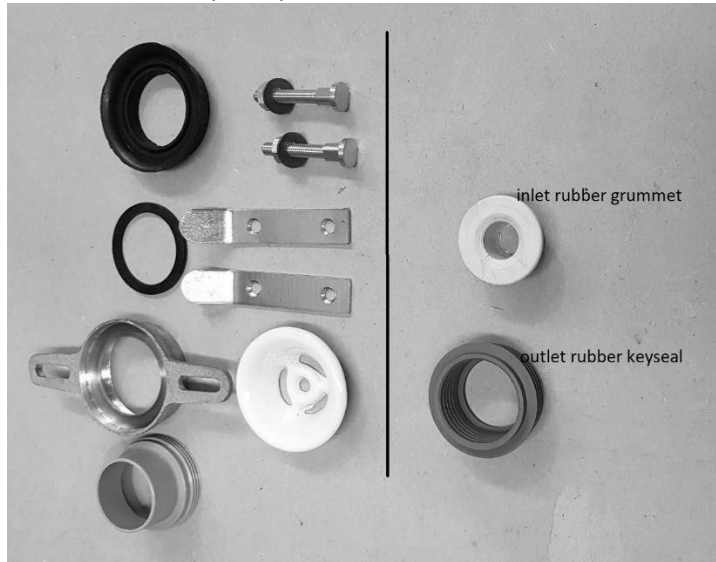

2. Assemble urinal:

- a. Assemble and attach waste outlet to the urinal (FIG 2)
- b. Install rubber grommet in back of urinal

3. Before wall sheeting is on:

- a. Determine desired height of urinal on wall.
- b. Put noggin in where fixing brackets are
- c. Bring 20mm copper inlet pipe out at correct height in relation to brackets
- d. Bring 50mm outlet pipe out at correct height in relation to brackets. NOTE: grey rubber key seal will only fit into a 50mm PVC socket (Will not fit into 50mm pipe!). Face of the socket should stop 5-10mm short of the finished face of the wall.

4. Install wall sheeting / tiles

5. Fix brackets to the wall

6. Cut back the copper (inlet) flush pipe to the measurement shown in FIG 1.

7. Lubricate both the inlet pipe and the outlet rubber key seal

8. Install urinal on wall

- a. Gently push the urinal on to the 20mm copper pipe.
- b. Pivoting the urinal in the inlet pipe, hook over the brackets one at a time
- c. Then let down the bottom of the urinal so the key seal slides into the 50mm PVC socket.

9. Flush water through the urinal to test for leaks

10. Seal around the urinal with a sanitary grade silicone

FIG 1:

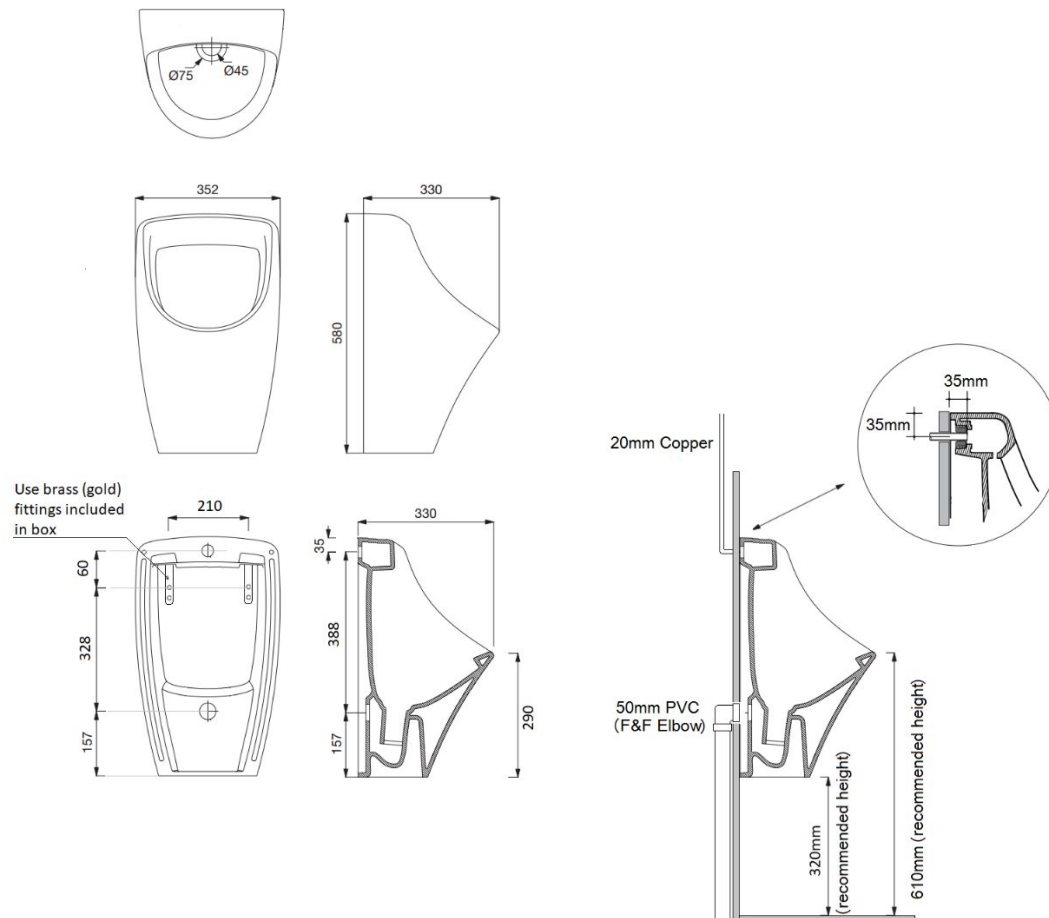


FIG 2:

